



3. Select the [Browse] button and navigate to the directory where the Firmware File (.bk extension) is located.
4. Select the file. Three files should be shown in the source file box just below the [Browse] button:

5. Make sure the radio is off
6. Connect the BKR0710 programming adaptor and connect the USB cable
7. Press the PTT button and switch the radio on. The LED indicator on the radio should be flashing blue. Release the PTT button.
8. Select the [Start] button on the application.

When firmware flashing is complete.