 





BKR0700 Cloning Cable User Instructions

Contents




The Target radio must be put in “Destination Clone Mode.” The BKR portable radio can only receive “Active Zone” or “Picklist” clone information.

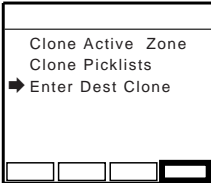


On the Target radio:

1. Select the Menu button.
2. Use the up/down buttons to select “Cloning”.
3. Press the [ENT] button.
4. Select “Enter Dest Clone”.

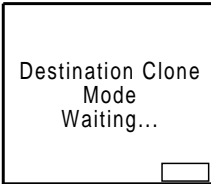

When the Target radio is in “Destination Clone Mode”, the Source radio can initiate the cloning of the “Active Zone” or “Picklist”.

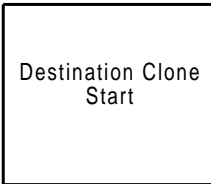

When cloning has started, the Target radio will display “Destination Clone Start”



After a successful information transfer, “Power of f” is displayed and the radio will restart.

When a Source radio's zone is programmed with less channels than a Target radio, channels about the highest programmed Source channel will be set to inactive.

A Target radio's zone will assume the channel structure of the Source radio. Example: Cloning from a Source radio with a five channel zone will enable only five channels in the Target radio.

BKR portable radios do not allow a receive frequency of 0. When a Source radio channel has no programmed receive frequency, the Target



BK Technologies
7100 Technology Drive
West Melbourne, FL 32904
1-800-648-0947
©2021 BK Technologies